


V171225


All wooden components are supplied unfinished and unprotected. A suitable finishing coat must be applied to all interior and exterior wooden surfaces immediately after installation.

Read the manual and check the parts for completeness before assembly!
Images are illustrative and may differ from reality, the construction principle is the same.


Layout Plan:

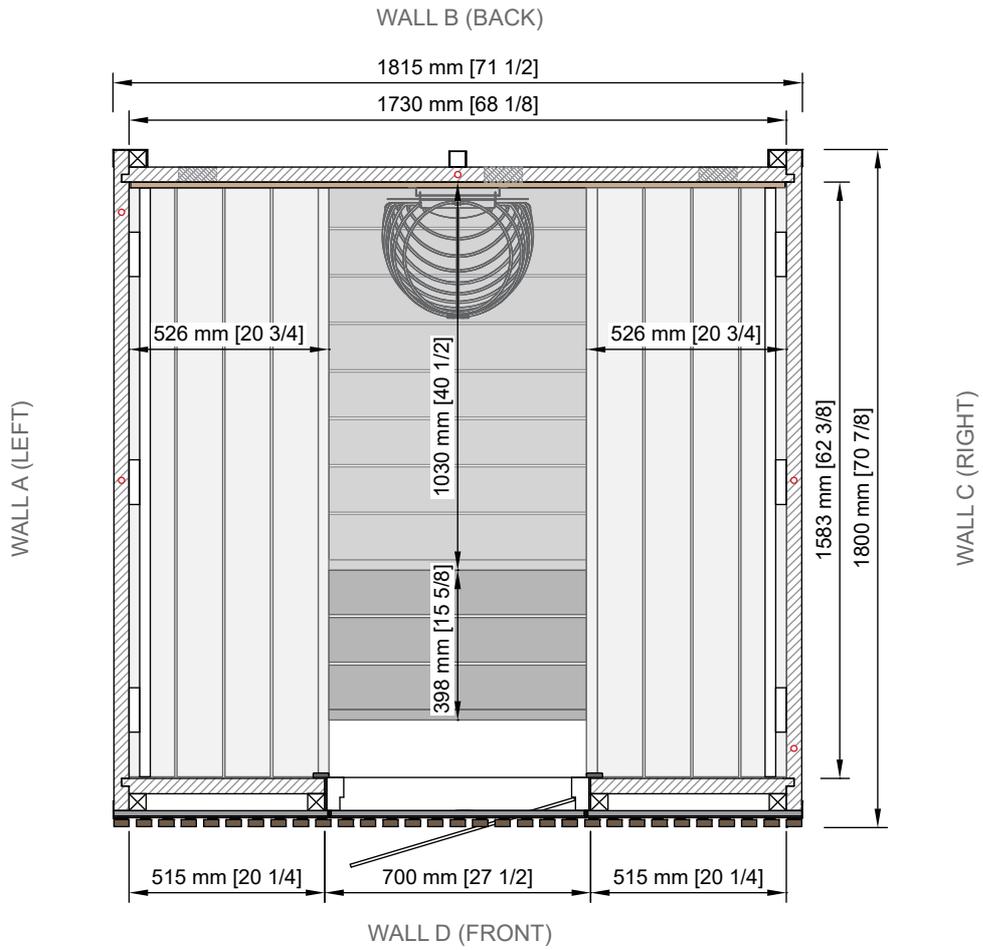

Cross Section:

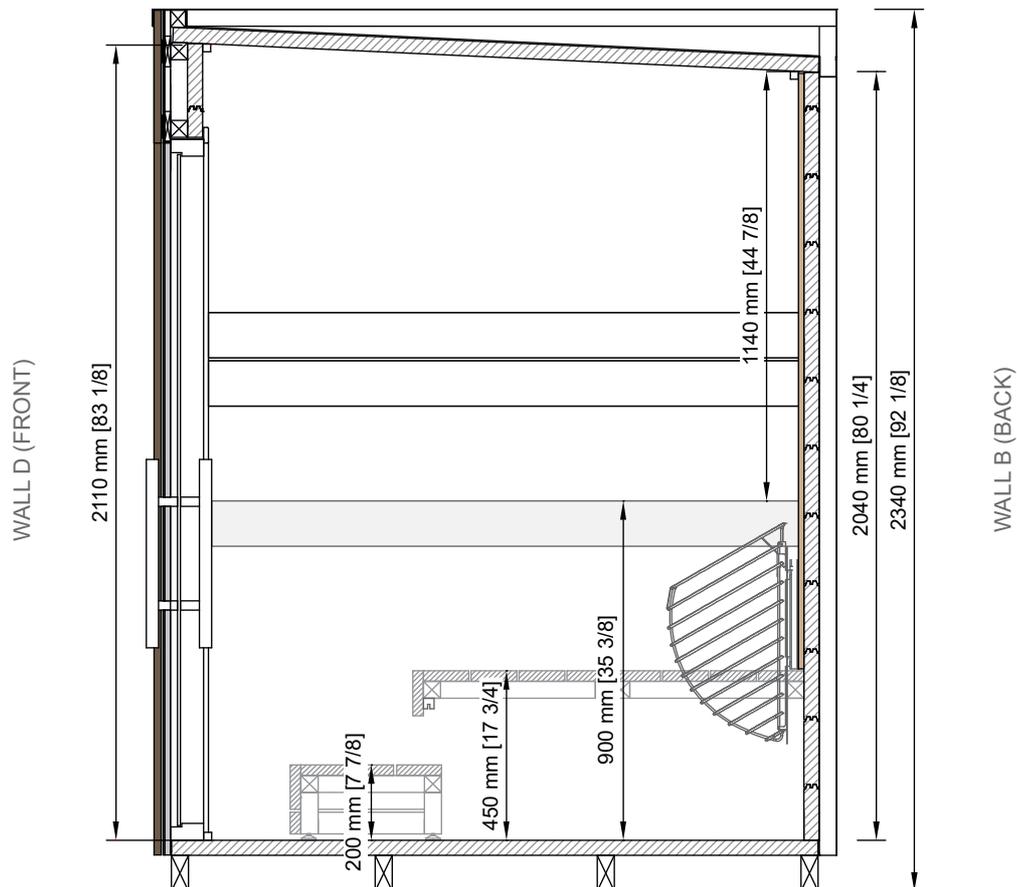

DETAILS LIST - Wall Logs:
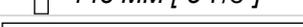
| Marking | Detail | Note | Length mm | Length in | Pcs. |
|---------|---------------------------------|---|-----------|-----------|-------|
| 001 | 40x188 [1 5/8"×7 3/8"] Wall Log |  | 1770 | 69 5/8" | 10+1* |
| 001A | 40x148 [1 5/8"×5 7/8"] Wall Log |  148 MM [5 7/8"] | 1770 | 69 5/8" | 1 |
| 001B | 40x98 [1 5/8"×3 7/8"] Wall Log |  98 MM [3 7/8"] | 1770 | 69 5/8" | 1 |
| 001C | 40x188 [1 5/8"×7 3/8"] Wall Log |  | 1770 | 69 5/8" | 1 |
| 001D | 40x174 [1 5/8"×6 7/8"] Wall Log |  174 MM [6 7/8"] | 1770 | 69 5/8" | 1 |
| 002 | 40x188 [1 5/8"×7 3/8"] Wall Log |  | 1753 | 69" | 22+1* |
| 002A | 40x96 [1 5/8"×3 3/4"] Wall Log |  96 MM [3 3/4"] | 1753 | 69" | 2 |
| 002B | 40x174 [1 5/8"×6 7/8"] Wall Log |  174 MM [6 7/8"] | 1753 | 69" | 2 |
| 005 | 40x188 [1 5/8"×7 3/8"] Wall Log |  | 1702 | 67" | 18+1* |
| 005A | 40x64 [1 5/8"×2 1/2"] Wall Log |  64 MM [2 1/2"] | 1702 | 67" | 2 |
| 005B | 40x52 [1 5/8"×2"] Wall Log |  52 MM [2"] | 1702 | 67" | 2 |
| 003 | 40x188 [1 5/8"×7 3/8"] Wall Log |  | 535 | 21 1/8" | 9 |
| 003A | 40x148 [1 5/8"×5 7/8"] Wall Log |  148 MM [5 7/8"] | 535 | 21 1/8" | 1 |
| 004 | 40x188 [1 5/8"×7 3/8"] Wall Log |  | 535 | 21 1/8" | 9 |
| 004A | 40x148 [1 5/8"×5 7/8"] Wall Log |  148 MM [5 7/8"] | 535 | 21 1/8" | 1 |
| 006 | 40x127 [1 5/8"×5"] Wall Log |  | 1753 | 69" | 2 |
| 007 | 40x46 [1 5/8"×1 3/4"] Wall Log |  46 MM [1 3/4"]; 3° | 1648 | 64 7/8" | 1 |
| | Hitting Block |  | | | 2 |

Base Frame:

| | | | | | |
|------|----------------------------------|-------|------|---------|---|
| AR-1 | 45X95 [1 3/4"×3 3/4"] Base Frame | Black | 1800 | 70 7/8" | 4 |
|------|----------------------------------|-------|------|---------|---|

Facade:

| | | | | | |
|---|-------------------------------------|------------------------------------|------------|-------------------|-------|
| P-1 | 45x45 [1 3/4"×1 3/4"] Vertical Post | | 2116 | 83 1/4" | 6 |
| P-2 | 45x45 [1 3/4"×1 3/4"] Horiz. Post | | 695 | 27 3/8" | 2 |
|  | 20x40 [3/4"×1 5/8"] Deco. Slats | | 2242 | 88 1/4" | 20+2* |
|  | 20x40 [3/4"×1 5/8"] Deco. Slats | | 353 | 13 7/8" | 11+1* |
| | Facade Panel: LEFT & RIGHT | <i>with fixing clips for 20x40</i> | 568 x 2242 | 22 3/8" × 88 1/4" | 2 |
| | Facade Panel: CENTER | <i>[3/4"×1 5/8"] slats</i> | 676 x 352 | 26 5/8" × 13 7/8" | 1 |

Moldings:

| | | | | | |
|------|-----------------------------------|--------------------|------|---------|---|
| DI-0 | 21x21[7/8"] Ceiling/Floor Molding | <i>Cut to fit!</i> | 2100 | 82 5/8" | 8 |
| UL-1 | 12x42 [1/2"×1 5/8"] Door Molding | <i>Cut to fit!</i> | 2200 | 86 5/8" | 3 |

Doors / Windows:

| | | | | | |
|-----|-----------------------|--|------------|-------------------|---|
| U-1 | Glass Door | | 690 x 1860 | 27 1/8" × 73 1/4" | 1 |
| | Door handle | | | | 1 |
| | Screw Cover Caps | | | | 8 |
| | Metal Threshold Cover | | 88 x 690 | 3 1/2" × 27 1/8" | 1 |

* Spare parts included for replacement in case of damage or missing components.

DETAILS LIST - Sauna Benches:

| | | | | | |
|--|--|--|----------------|---------------------|---|
| | Top Bench | | 524 x 1563 | 20 5/8" × 61 1/2" | 2 |
| | Bottom Bench | <i>supplied in two parts</i> | 1028 x 1722 | 40 1/2" × 67 3/4" | 1 |
| | Backrest | | 244 x 1563 | 9 5/8" × 61 1/2" | 2 |
| | Step Bench | | 400 x 800 | 15 3/4" × 31 1/2" | 1 |
| | Vertical Support 42x42 [1 5/8"×1 5/8"] | <i>with adjustable leg</i> | 1000 | 39 3/8" | 2 |
| | Horizontal Support 45x45 [1 3/4"×1 3/4"] | | | | 1 |
| | Spacer Board | <i>install only without deco panel</i> | 524 x 118 x 15 | 20 5/8"×4 5/8"×5/8" | 2 |

Roof Covering:

| | | | | | |
|--|--------------------------|--|----------------|-------------------|------|
| | EPDM Rubber Roof Cover | | 2200 x 1900 | 86 5/8" × 74 3/4" | 1 |
| | Back Corner Cover Sheet |  | 91 x 46 x 2300 | 3 5/8" × 1 3/4" | 5+1* |
| | Roof Cover Sheets | | | × 90 1/2" | |
| | Front Corner Cover Sheet |  | 10 x 46 x 2243 | 3/8" × 1 3/4" | 2 |
| | Roof Rainwater Gutter | | | × 88 1/4" | |
| | Roof Rainwater Gutter |  | 44 x 55 x 2100 | 1 3/4" × 2 1/8" | 1 |
| | Base Frame Cover Sheet | | | × 82 5/8" | |
| | Base Frame Cover Sheet |  | 40 x 2020 | 1 5/8" × 79 1/2" | 2 |
| | Rainwater Pipe - Bottom | | | | |
| | Rainwater Pipe - Bottom |  | 43 x 38 x 2066 | 1 3/4" × 1 1/2" × | 1 |
| | Rainwater Pipe - Top | | | 81 3/8" | |
| | Rainwater Pipe - Top |  | 46 x 41 x 2066 | 1 3/4" × 1 5/8" | 1 |
| | Rainwater Pipe - Bottom | | | × 81 3/8" | |


Fasteners and Accesories:

| | | | | | |
|--|---------------------------------|---|---------|----------|-----|
| | EPDM Quickprime | | 0,125 L | 0,125 L | 1 |
| | EPDM Glue | | 2,5 L | 2,5 L | 1 |
| | Splice Tape | | 2 m | 78 3/4" | 1 |
| | Paint Roller + Handle | | | | 1 |
| | Transparent Silicone | <i>between each wall-log row</i> | | | 4 |
| | Gunfoam | <i>for sealing windows and doors</i> | | | 1 |
| | Rubber Sealing Strip | <i>between walls and ceiling</i> | 8 m | 315" | 1 |
| | Moisture Barrier Tape | <i>for exposed wall-log end grains</i> | 10 m | 393 3/4" | 1 |
| | Screw 4.5x70 | | | | 400 |
| | Screw 4.2x55 | | | | 70 |
| | Screw 6x180 | | | | 15 |
| | Screw 3.5x50 | <i>for fixing backrests and spacers</i> | | | 20 |
| | Screw 4x40 | <i>Black</i> | | | 25 |
| | Roofing Sheet Screw 4.8x25 | <i>Black</i> | | | 50 |
| | Wronic Screw 4.2x25 | | | | 15 |
| | Headless Nail 40 mm | | | | 100 |
| | Ventilation Grid Ø100 [3 7/8"] | <i>Black</i> | | | 5 |
| | Ventilation Valve Ø100 [3 7/8"] | <i>Wood</i> | | | 1 |
| | Black Paint | <i>RAL 9005</i> | 0,9 L | 0,9 L | 1 |
| | Sanding Pad | | | | 1 |
| | Würth MS Polymer Glue | <i>for fixing metal covers</i> | 290 ml | 290 ml | 1 |

Optional Extras (only if ordered additionally):


| | | | | | |
|--|----------------------------|-----------------------------------|-------------|-------------------|---|
| | Decorative Back Wall Panel | | 1722 x 1580 | 67 3/4" × 62 1/4" | 1 |
| | LED Lighting Set 6 | <i>for top bench and backrest</i> | | | 1 |

Base Frame and Floor Boards:

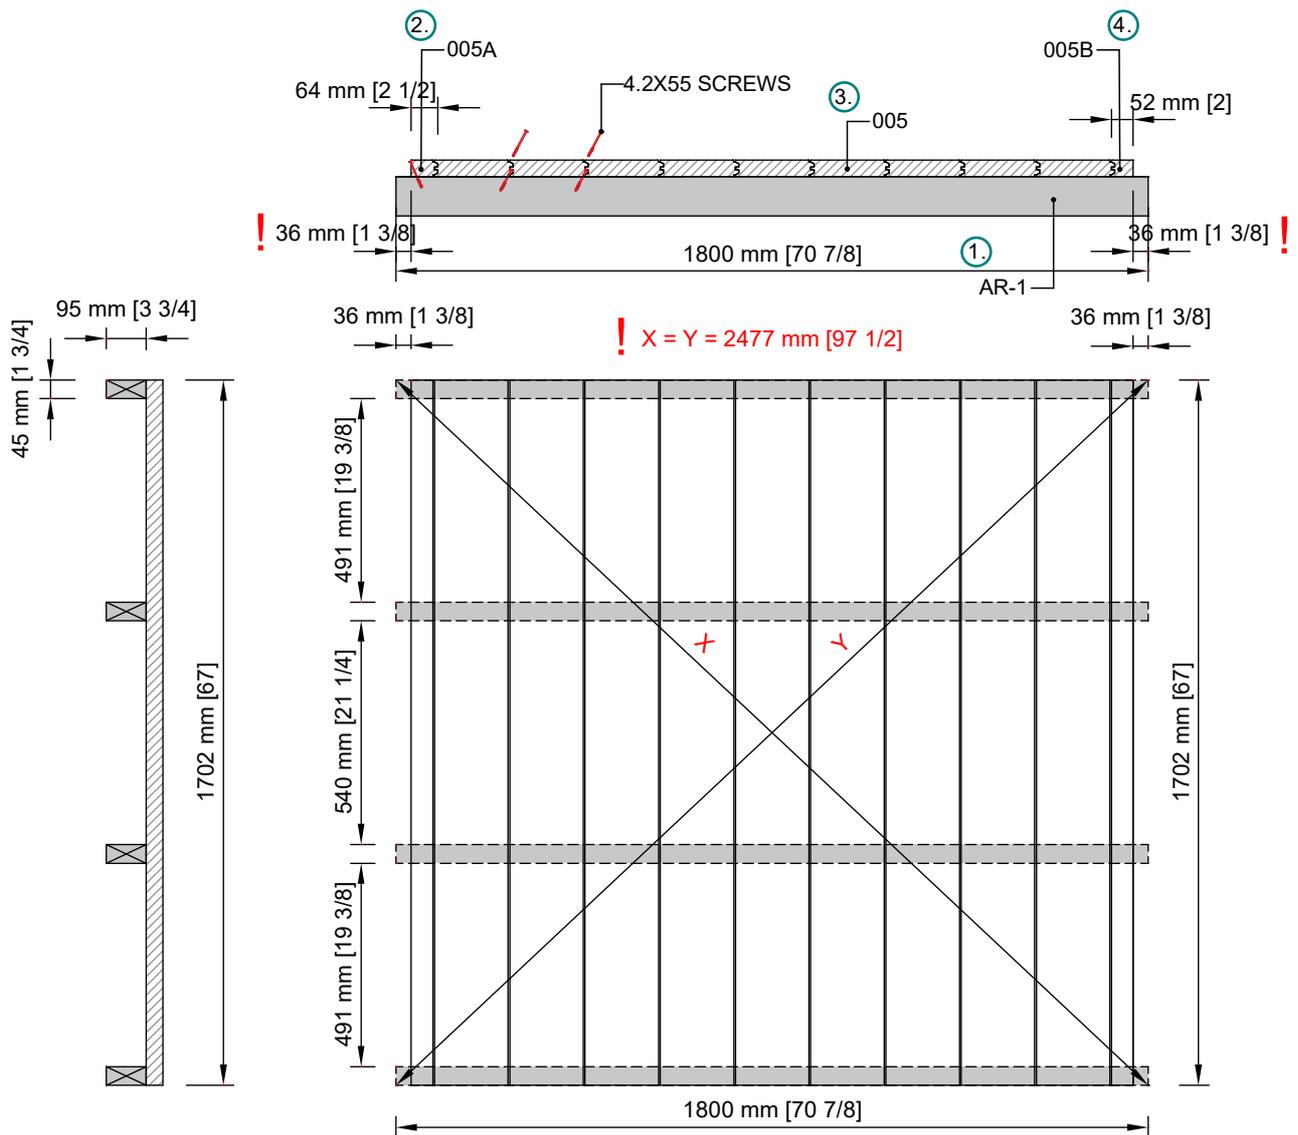

Place floor boards with the better-looking side facing up.


Fasten using 4.2 x 55 mm screws (hidden installation).

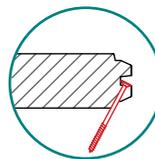

Cut the last board to fit, if needed.

Leave 36 mm [1 3/8"] of base frame beam exposed at both ends.

3D View:

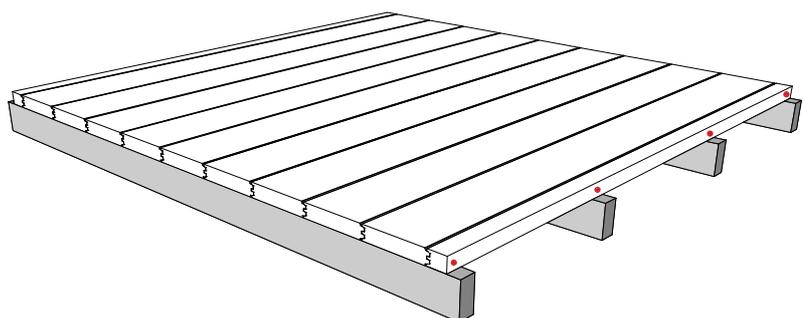



- installation sequence

Required Tools:






Wall Assembly:

TOP VIEW:

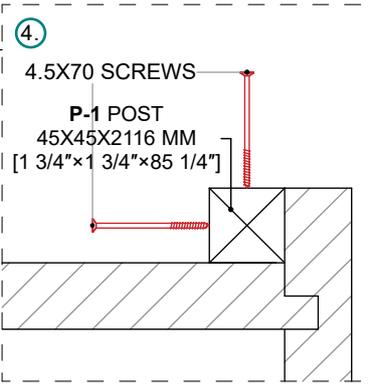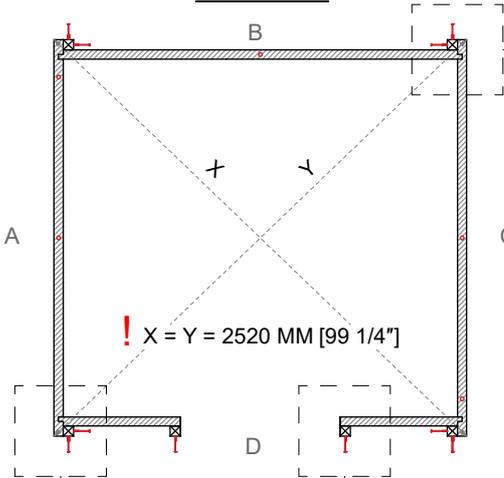

③ ! APPLY SILICONE BETWEEN EACH WALL-LOG ROW FOR WATERPROOFING

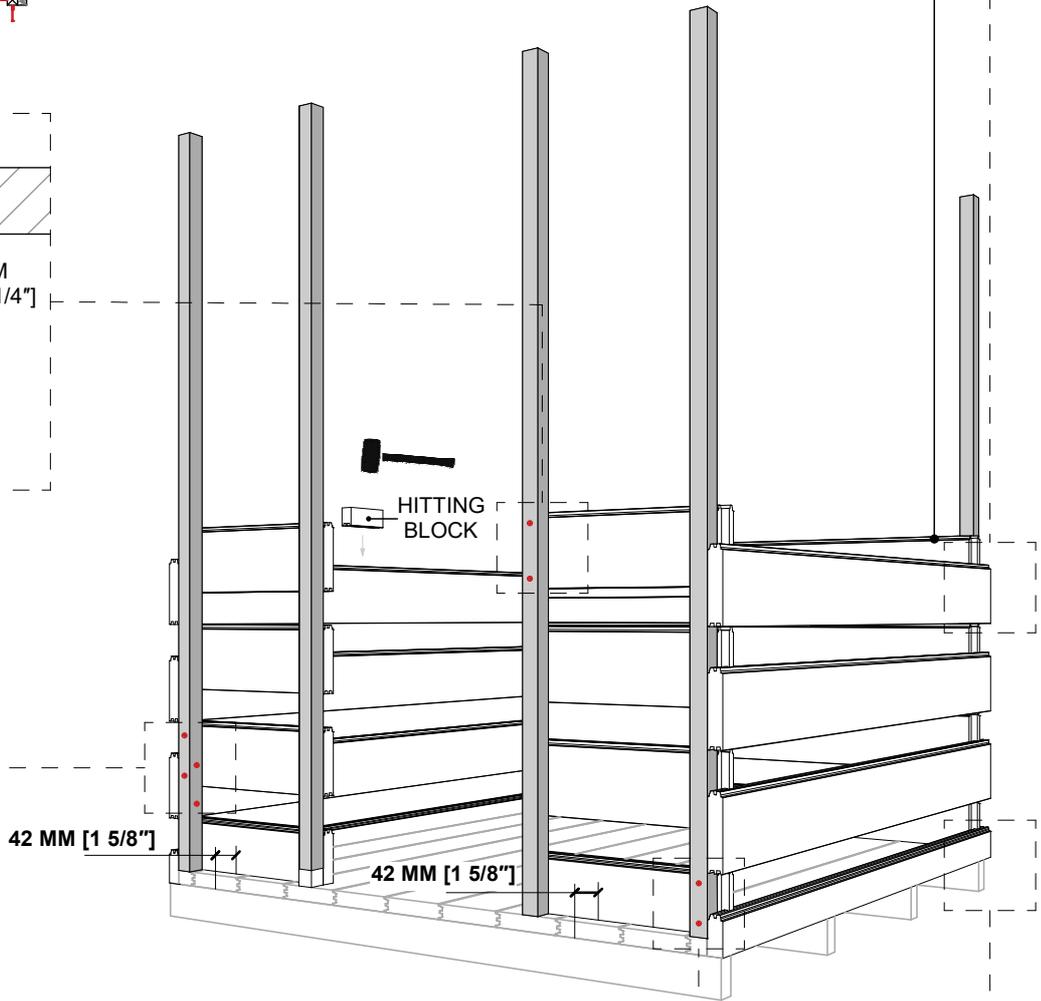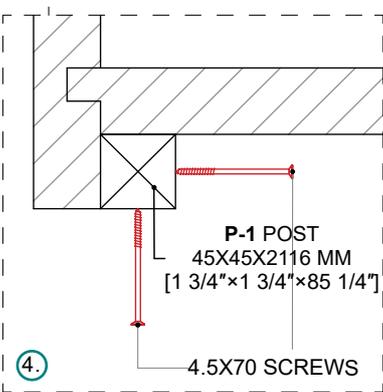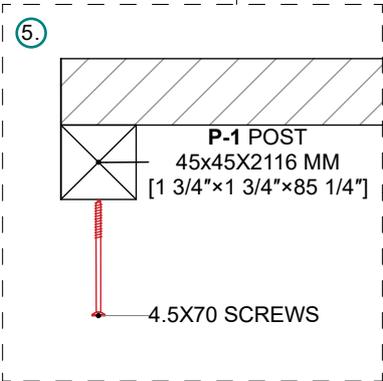


① - installation sequence


Required Tools:




FRONT:

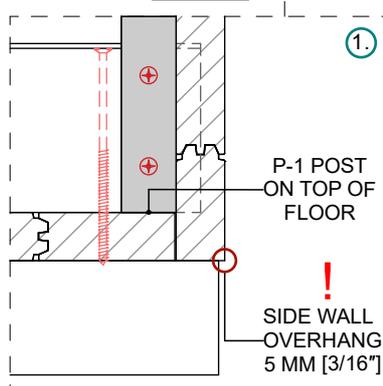


BACK:

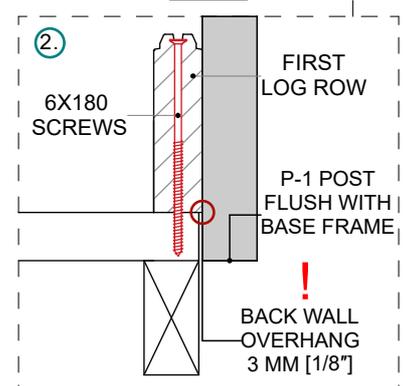

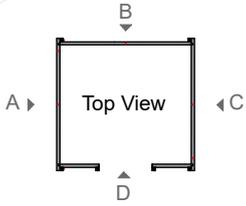


Wall Layout:


WALL D (FRONT)
VIEW FROM THE OUTSIDE

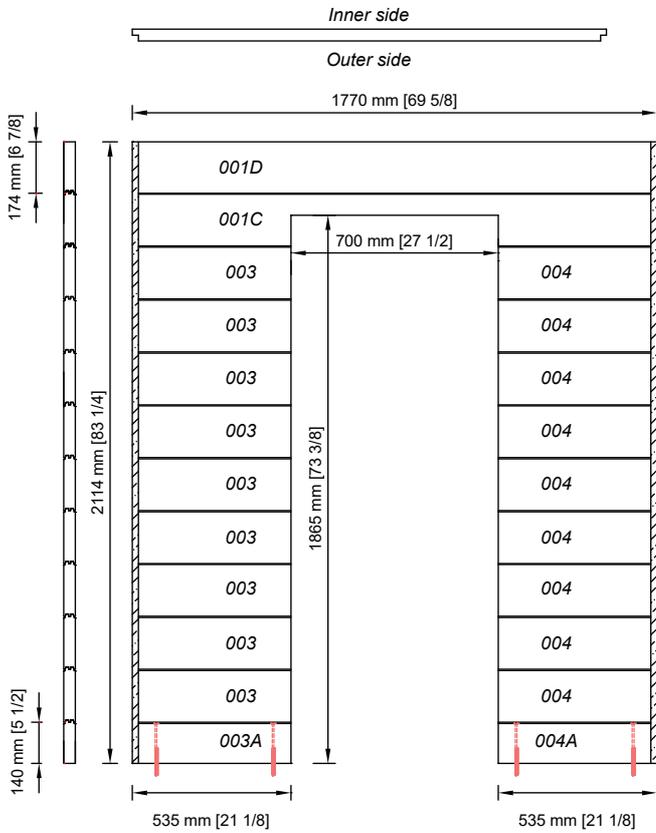


WALL A (LEFT)
VIEW FROM THE OUTSIDE

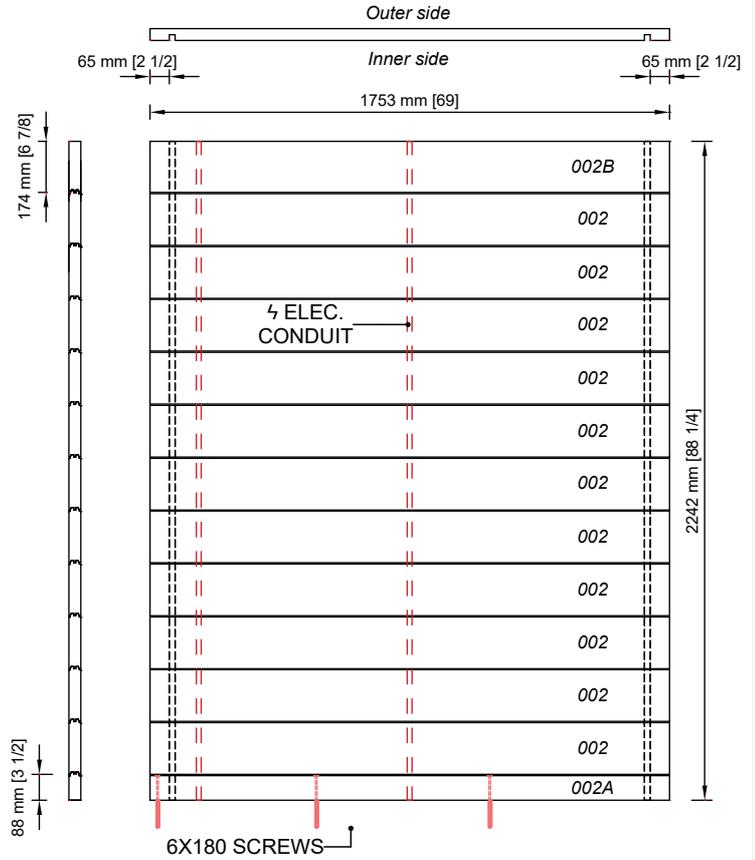


WALL B (BACK)
VIEW FROM THE OUTSIDE

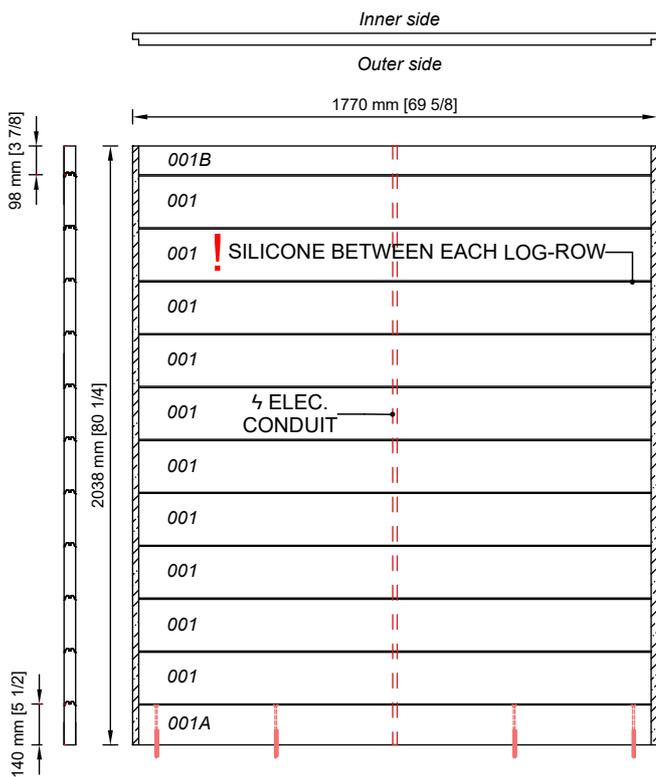

WALL C (RIGHT)
VIEW FROM THE OUTSIDE

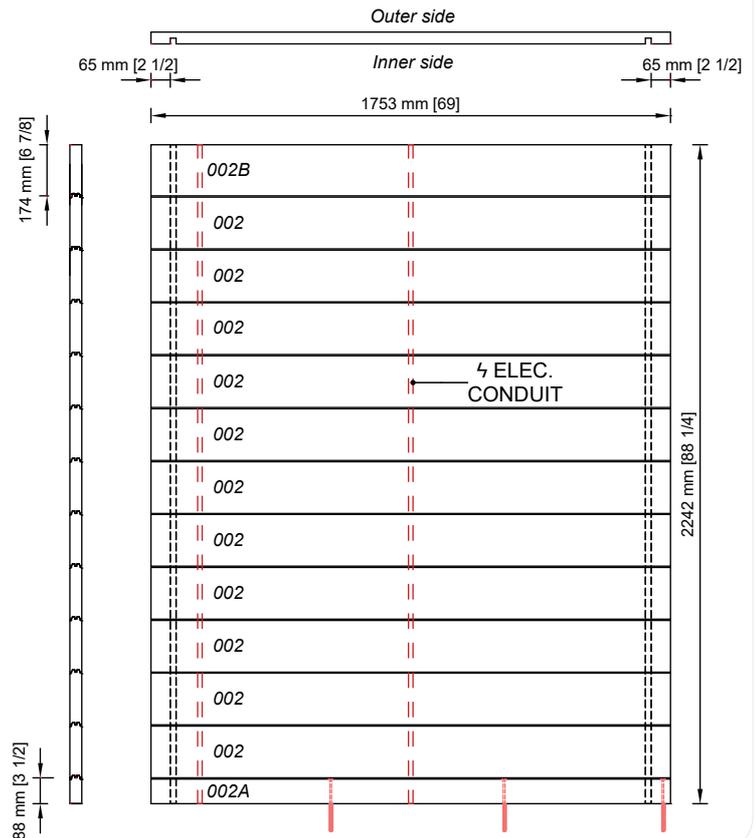


Roof Installation:

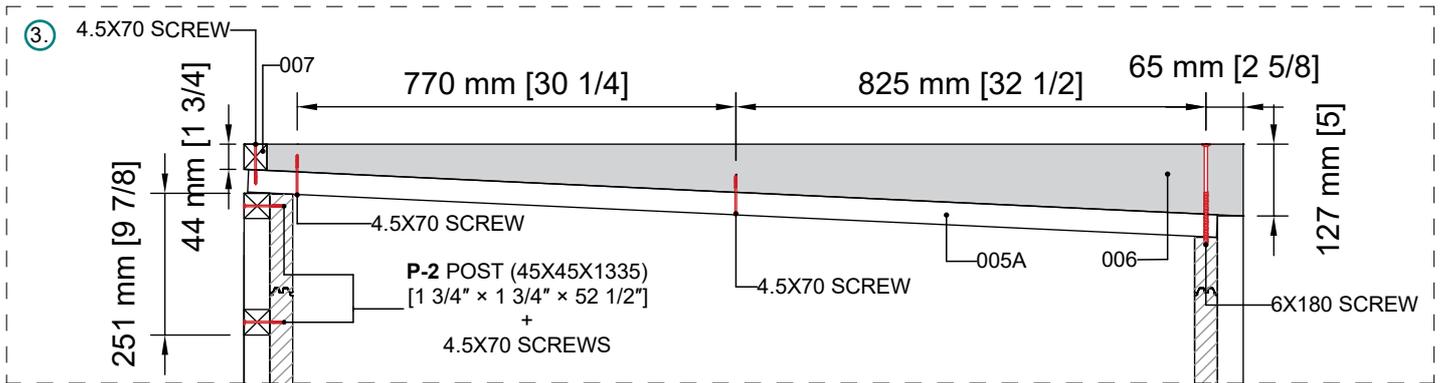


! Before installing the roof boards, check that the diagonals are equal and that the walls are level.

SIDE VIEW:

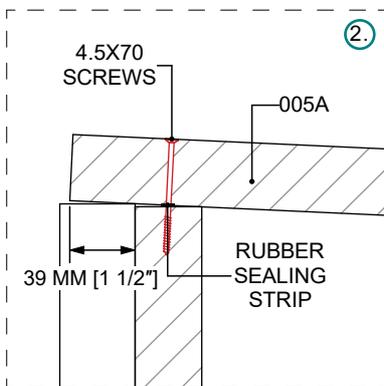


FRONT VIEW:

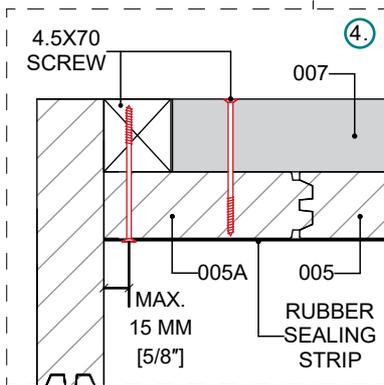


- installation sequence


Required Tools:

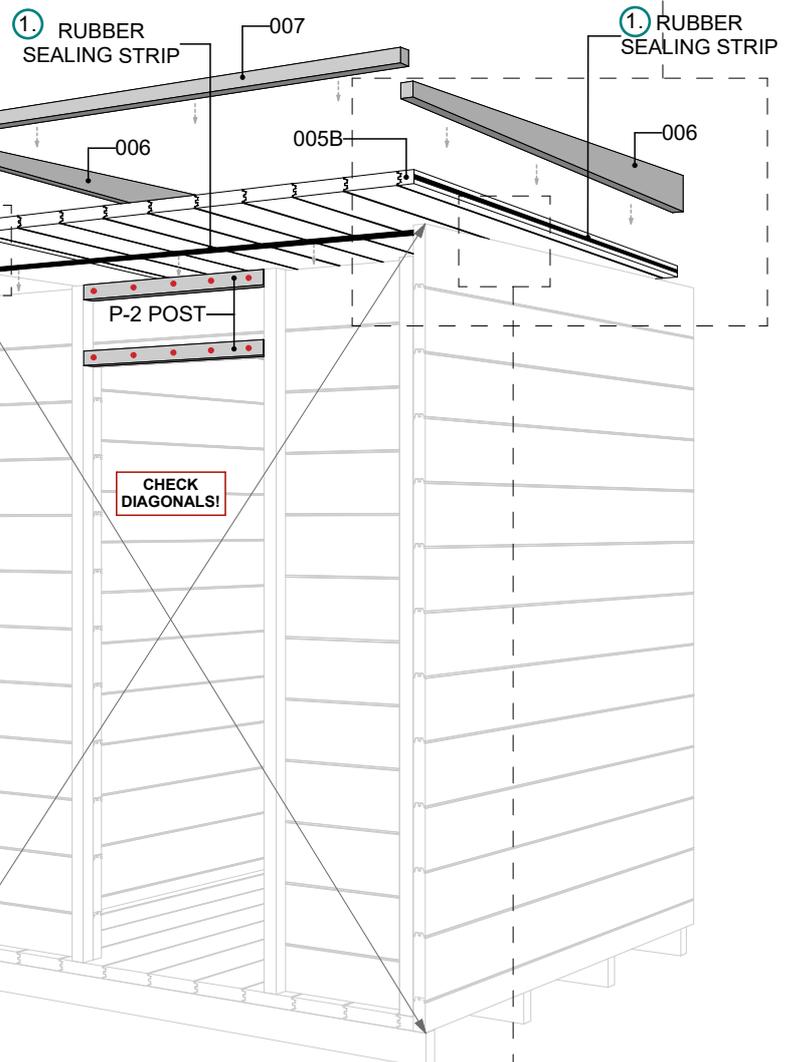

FRONT VIEW:

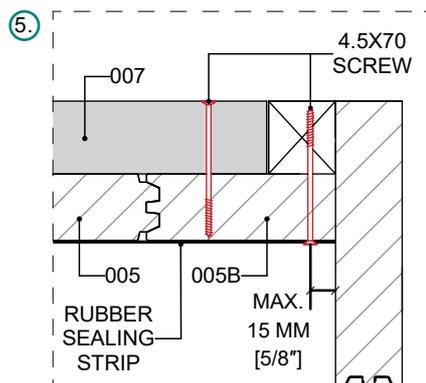

Facade Installation

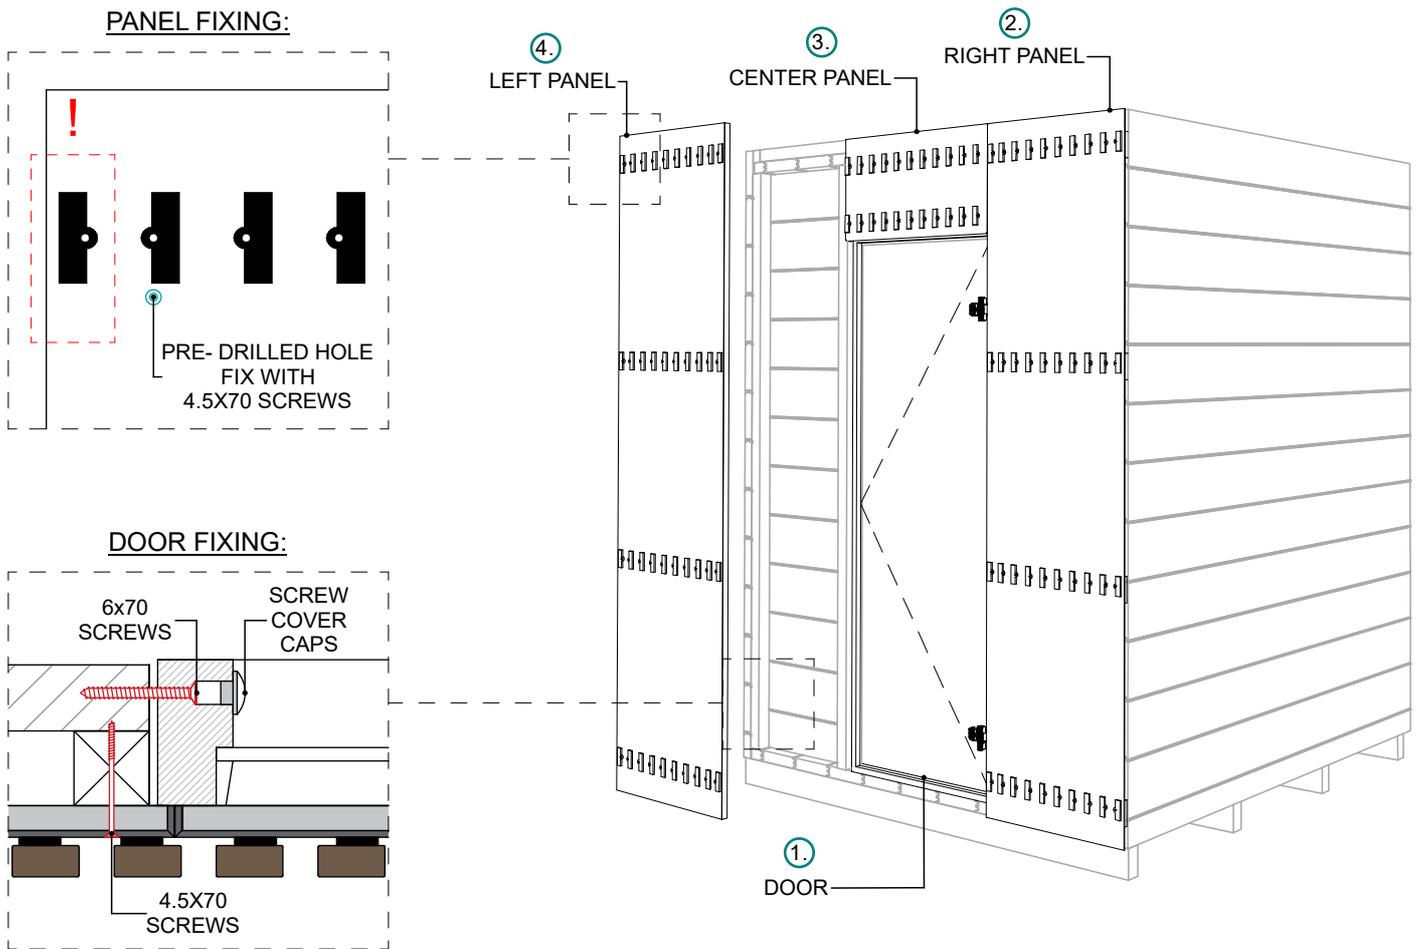

! Apply a suitable finishing coat to the decorative slats before clipping them into place.

! Seal gaps around the door and window with expanding foam, applied using a foam gun.



Allow the foam to fully cure, trim off excess material, and apply moisture barrier tape over the sealed areas.

Snap the decorative slats into place.


They are not designed for removal or reuse.

Extra slats are included in case of installation errors.



- installation sequence

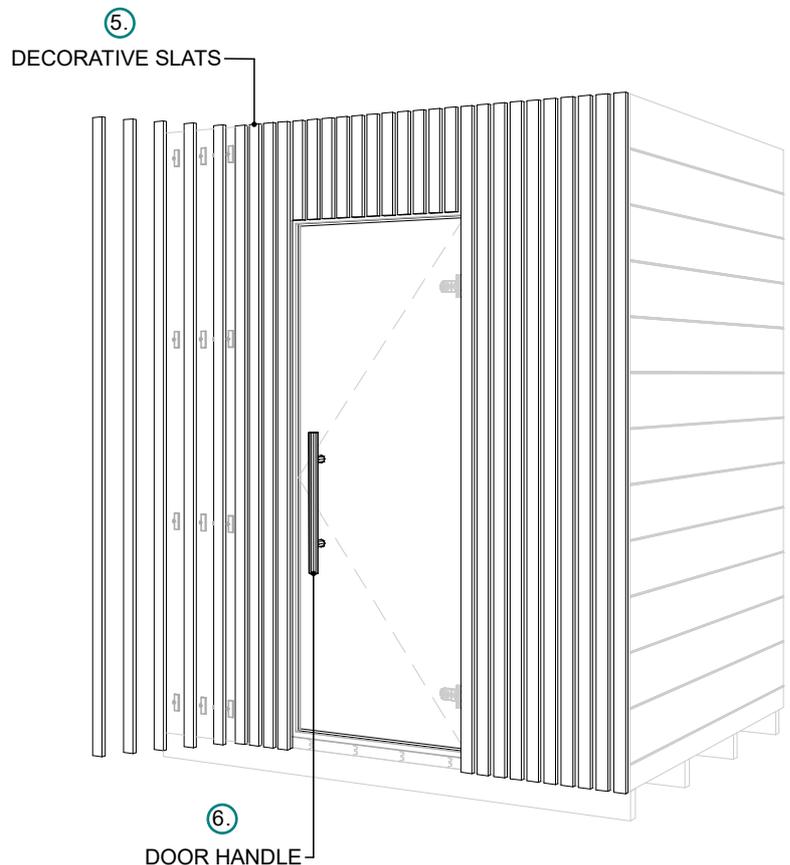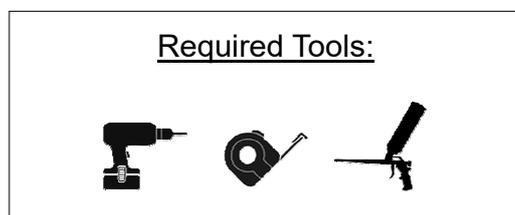

Back Wall Panel, Ventilation, Bench Supports

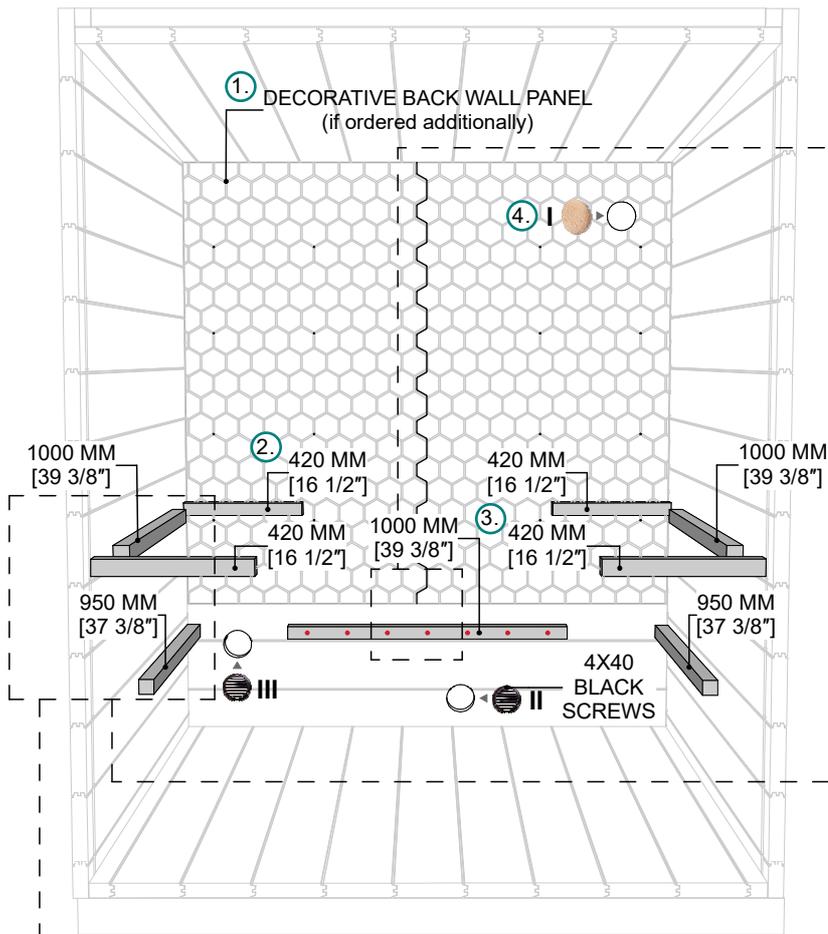


* It is recommended to apply wood glue in addition to screws.

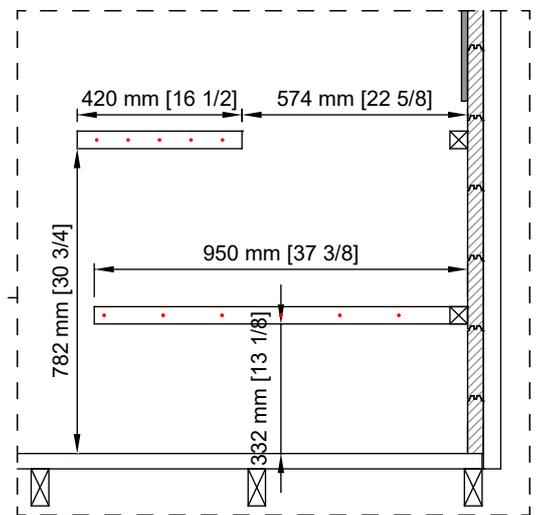
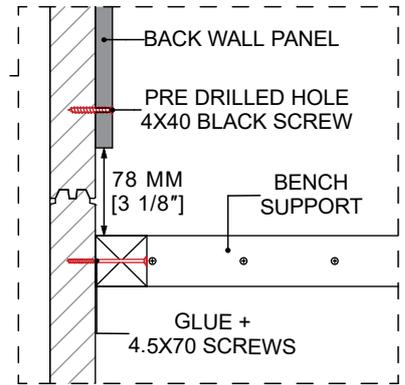


! If no optional deco back wall panel is ordered, install a 524x118x15 spacer board behind the top bench support at the front wall to compensate for the panel thickness and prevent gaps.

SPACER HEIGHT:

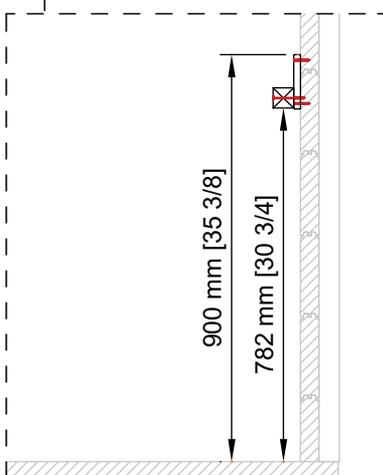

SPACER FIXING:

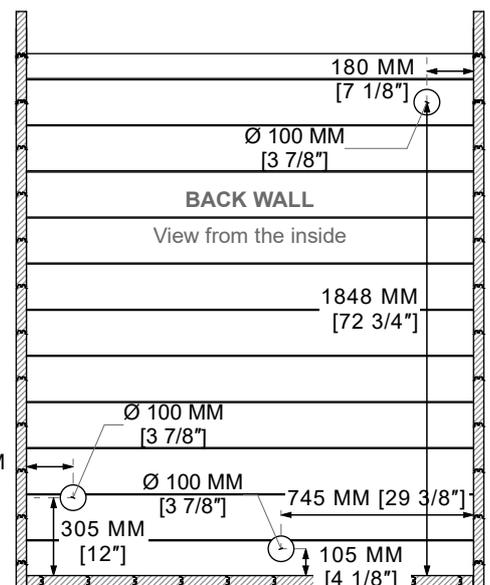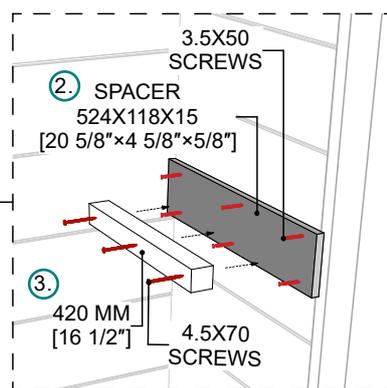

- installation sequence

Required Tools:



Ø100 MM

I – EXHAUST OPENING:


Install the metal grid outside and the wooden valve inside, near the ceiling. Keep the valve closed during sauna use. Open it afterward to release moisture. For faster drying, leave the door slightly open.

Open the valve between sessions if the room feels too humid or lacks air.

II – INLET: Install metal grids both inside and outside with 4x40 black screws.

III – OUTLET: Install also metal grids both inside and outside.

Benches and Moldings

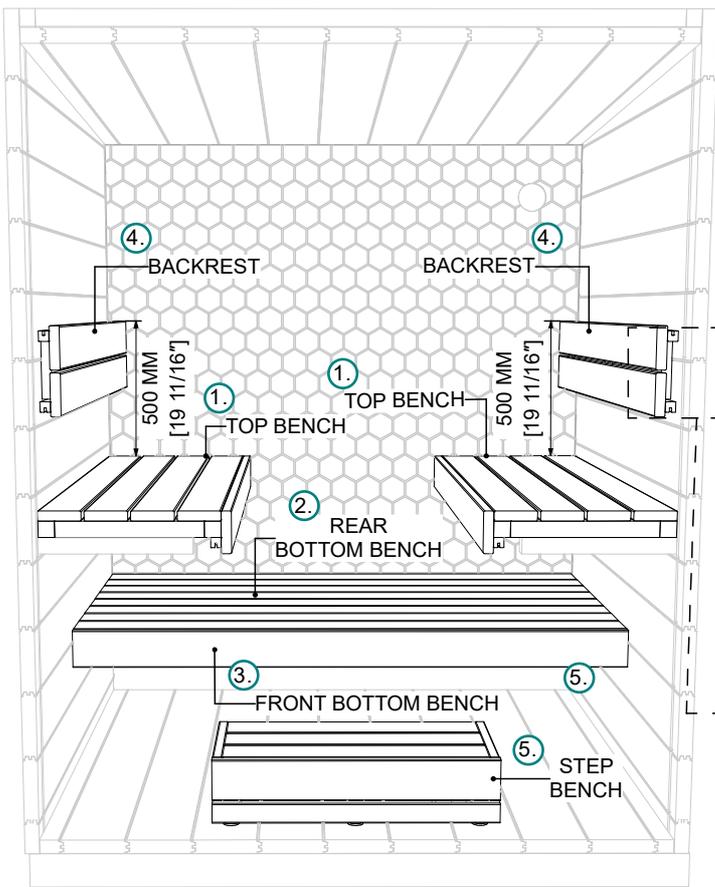

Benches:

Place benches on their supports. Secure from underneath with 2–3 screws (4.5x70 mm). Check for stability.


Backrests:

Install above the top bench, approx. 500 mm [19 11/16"] from the seat surface. Use 3.5x50 mm screws.

LED Strips (if ordered separately):

Install the LED strips into the designated profiles behind the backrest and beneath the top bench. Secure them firmly using glue or silicone.

⚠ All electrical work must be done by a certified electrician.

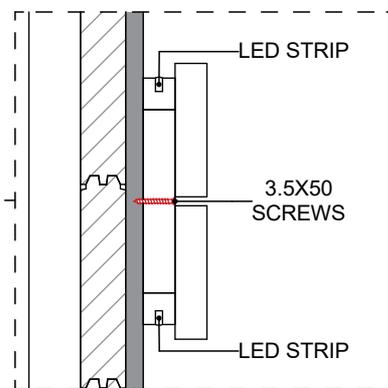


Moldings:

Measure and cut to size.

Trim corners at 45° for a neat joint.


Fix with 40 mm headless nails, spaced evenly.

! If no optional deco back wall panel is ordered and a spacer board is installed, cut the door molding above it and continue below.

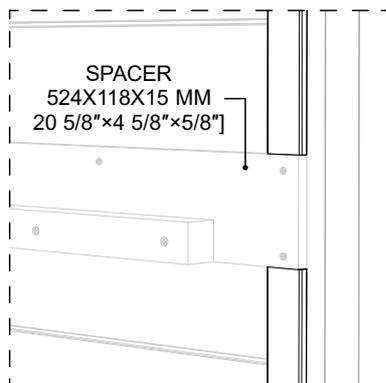


- installation sequence

Required Tools:

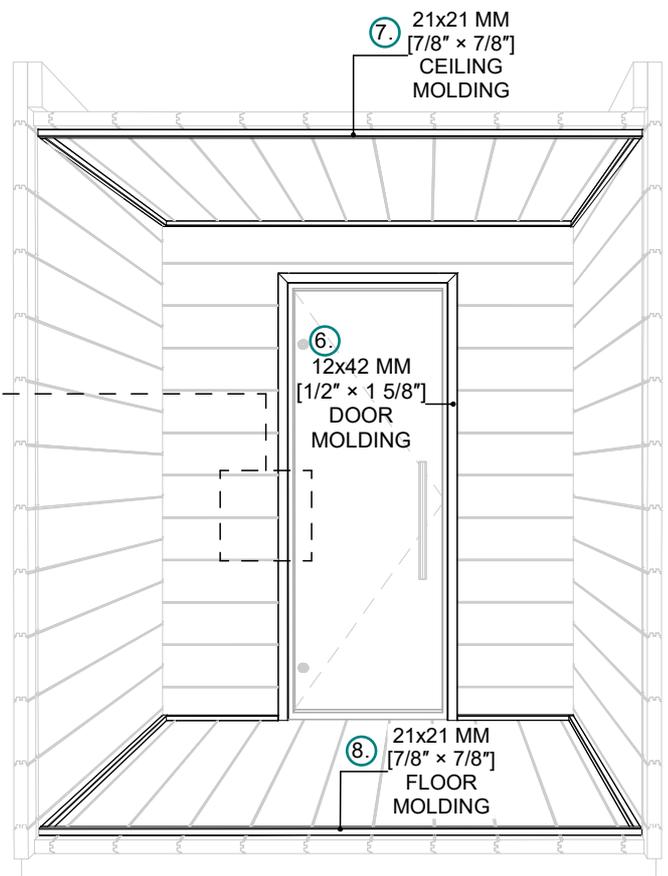


Roof Cover and Rainwater Gutter Installation

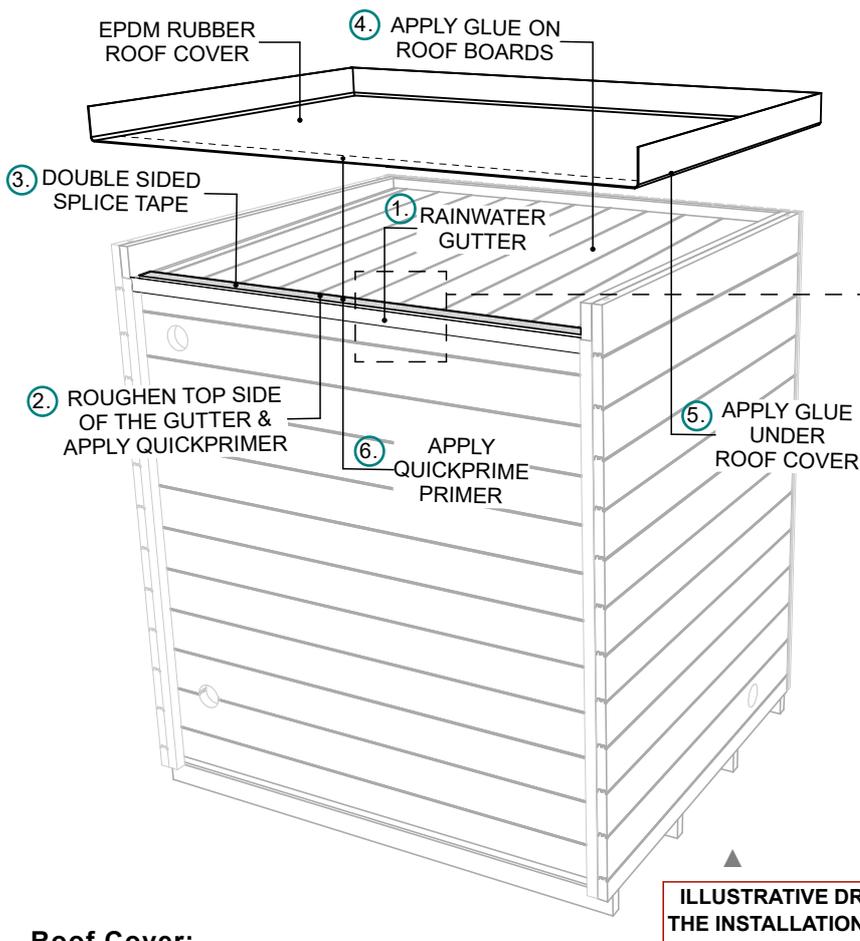

Rainwater gutter:

Install the rainwater gutter at the back of the sauna, securing it to the roof boards with 4.2x25 black Wronic screws spaced about 200 mm [7 7/8"] apart.

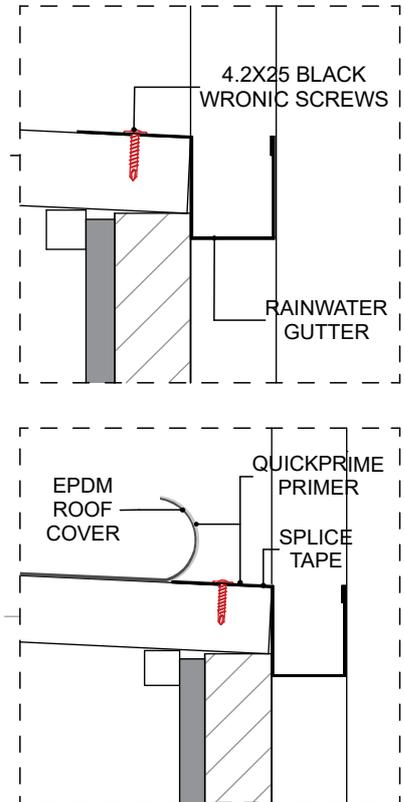

Roof Cover:

Roughen the top side of the gutter with a sanding pad. Apply EPDM QuickPrime and let it dry. Cut splice tape to length, remove one side of the backing, and stick it to the primed area. Do not remove the top liner yet.

Remove all dirt, dust, debris, water, ice, and fasteners from the roof.
 Check the EPDM roll and packaging for any damage before and during installation.
 Lay the EPDM membrane in place, approx. 5 mm [3/16"] behind and parallel to the gutter.
 Ensure equal overhang on both sides.

Fold back half the membrane. Apply EPDM glue to both the rubber and roof boards, leaving 100 mm [3/16"] at the back edge unglued for later taping. Do not glue the rubber where it extends up the side walls.
 Use gloves, goggles, and a respirator in a well-ventilated area.

! Important: Let glue dry to the touch (approx. 15+ minutes) before placing the rubber to avoid bubbles.

Lay glued rubber onto the roof and press down using a broom or brush to remove wrinkles and bubbles. Repeat for the other half.
 Roughen the underside of the rubber at the back. Remove the top liner from the previously applied splice tape. Apply QuickPrime to both surfaces, let it dry, then press rubber onto the tape.


Now glue the rubber up the side walls and cut off any extra material from the front and sides.

Required Tools:




- installation sequence

Metal Cover Sheets


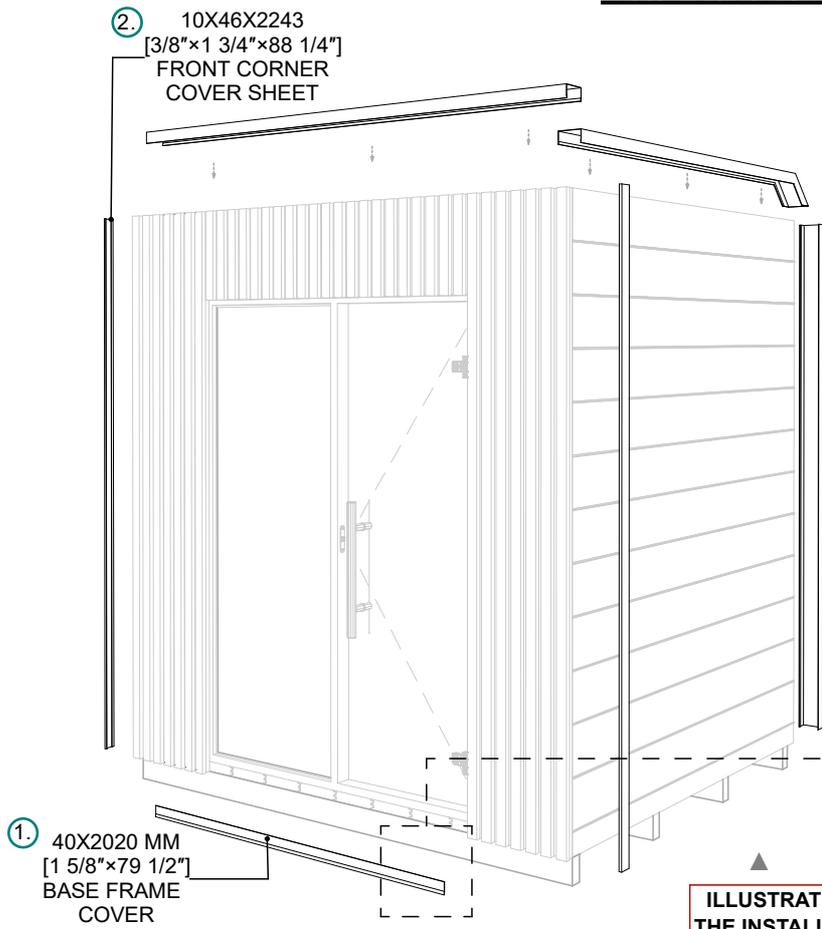


1. Fix **40x2020 mm** [**1 5/8" × 79 1/2"**] base frame cover sheets to floor boards with 4.2x24 mm black Wronic screws.
2. Install **10x46x2243 mm** [**3/8" × 1 3/4" × 88 1/4"**] front corner cover sheets and bond them to the walls with polymer glue.
3. Secure **91x46x2300 mm** [**3 5/8" × 1 3/4" × 90 1/2"**] back corner cover sheets to the rear corners using polymer glue. Install **91x46x2300 mm** [**3 5/8" × 1 3/4" × 90 1/2"**] cover sheets, starting with the sides of the roof and finishing at the front. Cut to size, fold the edges along the back wall, and secure with 4.8x25 mm roofing screws spaced approximately 300 mm [**11 3/4"**] apart.

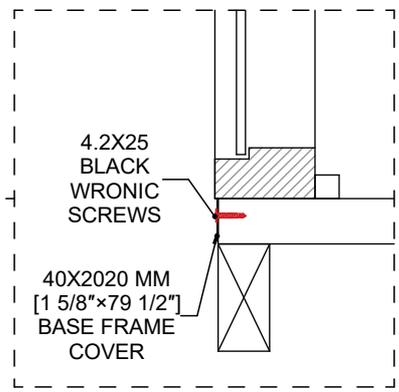

ILLUSTRATIVE DRAWING OF THE INSTALLATION PRINCIPLE

4. Install the bottom section **43x38x2066 mm** [**1 3/4" × 1 1/2" × 81 3/8"**] mm of the rainwater pipe at the center of the back wall and secure it with 4.2x42 Wronic screws.
5. Glue the upper section **46x41x2066 mm** [**1 3/4" × 1 5/8" × 81 3/8"**] on top using polymer glue.
6. Mark the pipe location on the gutter and cut a hole at that spot to allow rainwater to flow into the pipe.

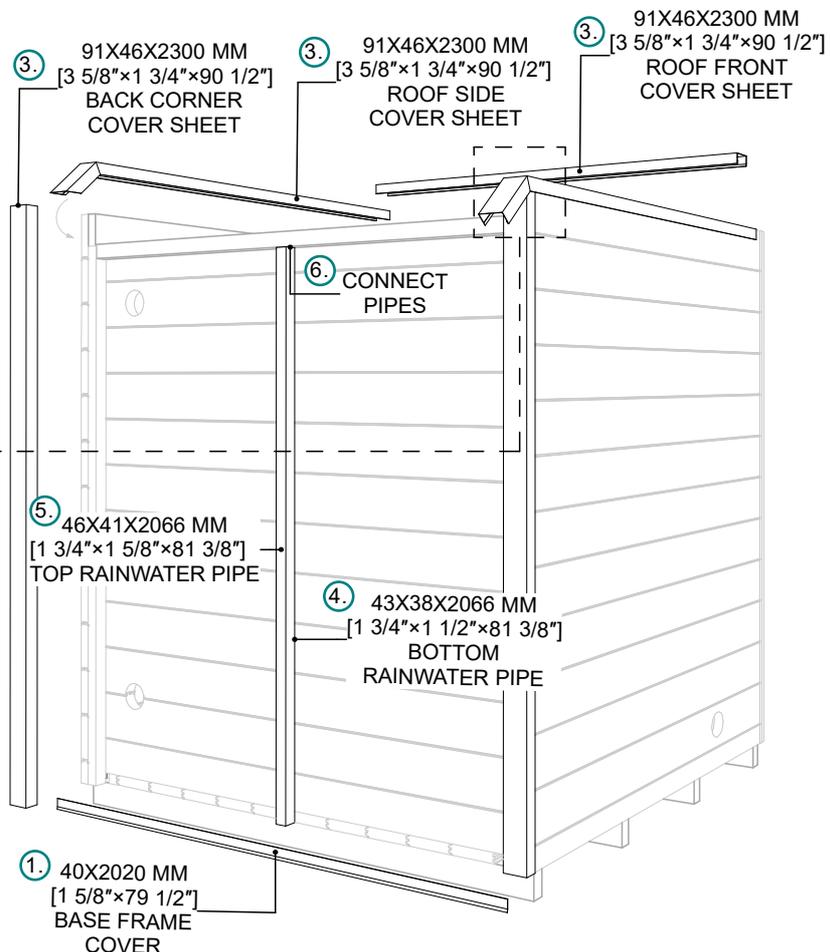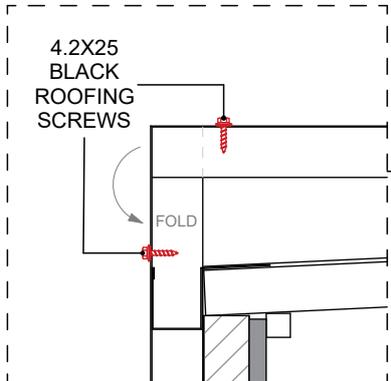

- installation sequence

Required Tools:



Safety Requirements and Maintenance

Safety Requirements

Electrical Safety:

Only a certified electrician should install or service the sauna heater.

Use a properly grounded, sauna-rated power supply. Do not use extension cords or power strips.

Ventilation:

Ensure adequate ventilation to allow fresh air circulation and prevent overheating or humidity buildup.

Proper ventilation ensures a steady flow of fresh air, helps maintain a consistent temperature, removes excess humidity, and prevents mold or wood damage.

Heater Placement & Use:

Keep flammable materials (e.g. towels, paper, clothing) away from the heater.

Never cover the heater or place objects on it.

Follow the manufacturer's guidelines for sauna stone placement.

User Safety:

Limit sauna sessions to 15–20 minutes. Do not exceed recommended temperatures.

Stay hydrated and exit immediately if you feel dizzy, nauseated, or uncomfortable.

Children must be supervised at all times.

Consult a physician before use if pregnant or if you have cardiovascular or other medical conditions.

Fire Safety:

Keep a smoke detector and fire extinguisher nearby (outside the sauna room).

Do not use candles or open flames inside the sauna.

Maintenance Guidelines

Wood Protection (Mandatory)

All wooden components are supplied unfinished and unprotected.

A suitable finishing coat must be applied to all interior and exterior wooden surfaces immediately after installation.

Treat walls, ceiling, benches, backrests, trim, and all visible wood.

Use only sauna-safe, heat-resistant, non-toxic products for interior surfaces.

Apply finish to clean, dry wood according to the product manufacturer's instructions.

Reapply as required depending on usage and environmental conditions.

Failure to apply proper protection may result in premature wood deterioration and may void the warranty.

After Each Use

Leave the door open to allow moisture to escape and ensure proper air circulation.

Wipe benches and walls with a damp cloth to remove sweat and residue.

Remove any water from the floor to prevent standing moisture.

Maintenance

Inspect the heater and stones for cracks or displacement. Replace sauna stones if cracked or crumbling.

Clean the floor to remove dirt and debris.

Ensure ventilation openings remain unobstructed.

Check for signs of mold or mildew; clean with a mild, sauna-safe disinfectant if necessary.

Tighten screws, fasteners, and fittings if loosened.

Inspect wood surfaces for dryness or splintering; lightly sand or re-oil if required using appropriate products.

Have a licensed technician inspect electrical components and heater performance.

General Care Instructions

Use towels on benches to reduce sweat absorption and protect wood surfaces.

Clean periodically with mild soap and water only. Do not use harsh, abrasive, or chemical cleaners.



Prevent standing water inside the sauna at all times.

Re-oil or lightly sand wooden surfaces if they become dry or splintered (only with appropriate products).

Non-compliance with these maintenance requirements may result in damage that is excluded from warranty coverage and may lead to the limitation or voiding of the manufacturer's warranty.

Electrical Wiring with HUUM Electric Sauna Heater

! Refer to the heater manufacturer's installation manual (supplied with the heater) for correct sensor installation heights.

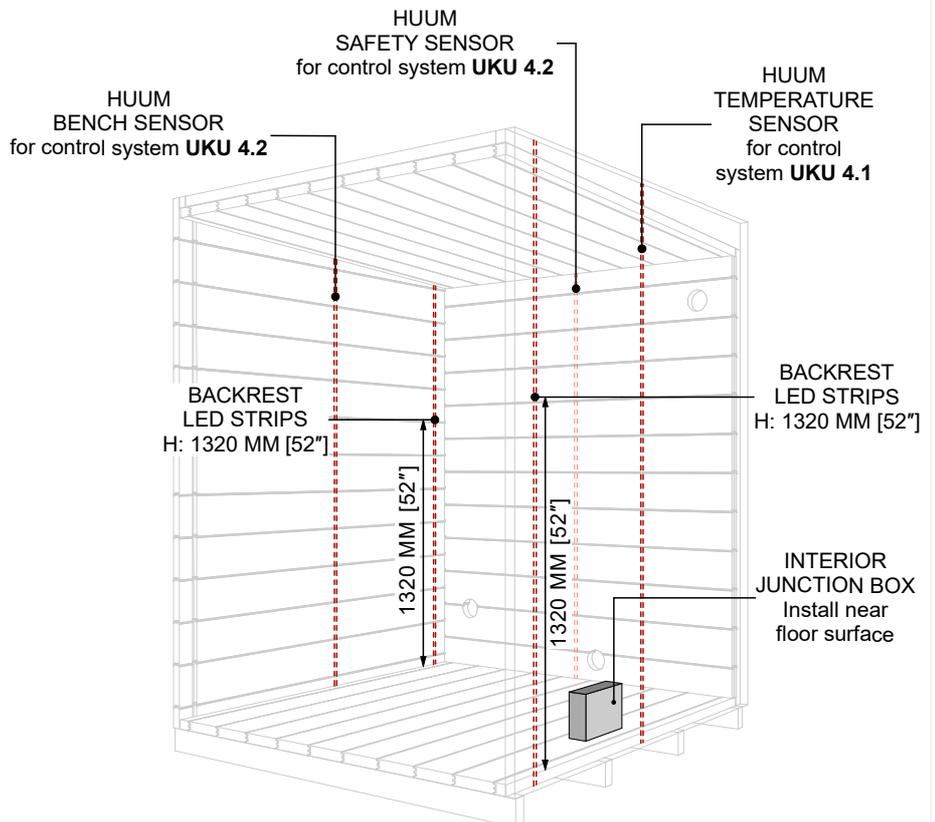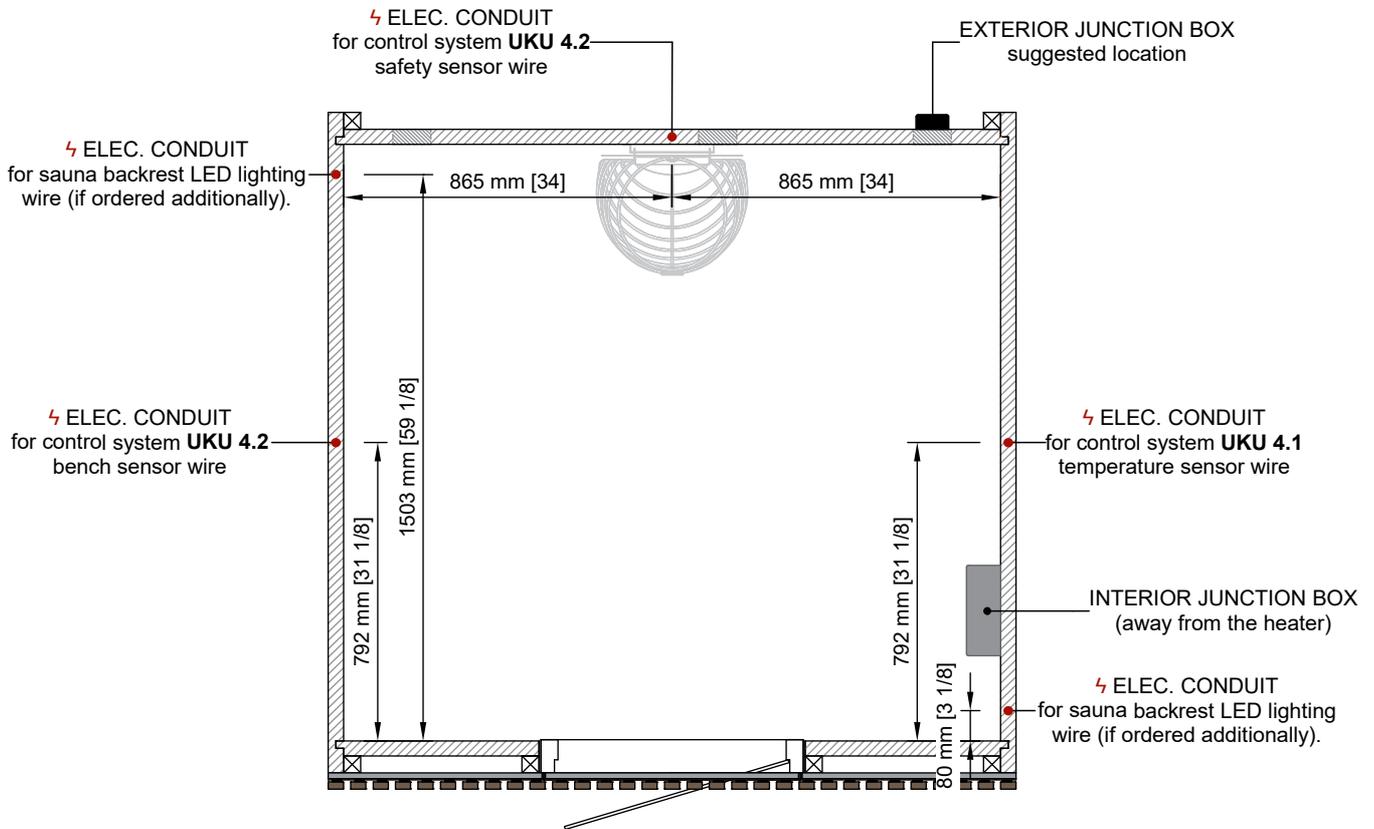

Drill holes at indicated heights at conduit locations.

Route wires through conduits to the junction box.

⚠ All electrical connections must be performed by a certified professional.

Required Tools:



Ø16 MM [5/8"]